

# GASTEC No.10 Instructions for Nitrogen Oxide & Nitrogen Dioxide Detector Tube

## FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump.

### ⚠ WARNING :

1. Use only Gastec detector tubes in a Gastec pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties, and guarantees regarding performance and data accuracy.

### ⚠ CAUTION : If you do not observe the following precautions, you may suffer injuries or damage the product.


1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, broken pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sampling.

### ⚠ NOTES : For maintaining performance and reliability of the test results, observe the following.

1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
5. The shelf life and storage condition of the tube are marked on the label of the tube box.

**APPLICATION OF THE TUBE :** Use this tube for detecting Nitrogen Oxide and Nitrogen Dioxide in the air or in industrial areas and for determining the environmental atmospheric condition.

**SPECIFICATION :** (Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

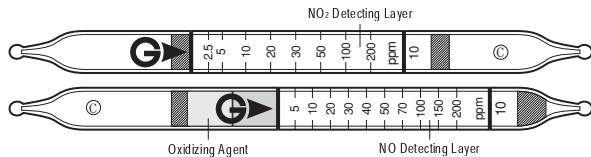

Name of Gas	Nitrogen Dioxide (NO <sub>2</sub> )		Nitric Oxide (NO)	
	Measuring Range	2.5 - 200 ppm	2.5 - 5 ppm	5 - 200 ppm
Number of Pump Strokes	1	2	1	
Stroke Correction Factor	1	1/2	1	
Sampling Time	45 seconds per pump stroke			
Detecting Limit	0.5 ppm (n = 1)		1 ppm (n = 2)	
Colour Change	White → Yellowish orange			
Reaction Principle	(NO <sub>2</sub> ) NO <sub>2</sub> + o-Tolidine → Nitroso-o-Tolidine (NO) NO + Cr <sup>6+</sup> + H <sub>2</sub> SO <sub>4</sub> → NO <sub>2</sub> NO <sub>2</sub> + o-Tolidine → Nitroso-o-Tolidine			

**Coefficient of Variation :** NO<sub>2</sub> tube; 10% (for 2.5 to 20 ppm) , 5% (for 20 to 200 ppm)  
NO tube; 10% (for 5 to 20 ppm) , 5% (for 20 to 200 ppm)

**\*\* Shelf Life :** Please refer to the validity date printed on the tube box.

**\*\* Store the tubes in a dark and cool place.**

## CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

**Temperature :** NO<sub>2</sub> : No correction is required.

NO : Correct for the temperature with the table below:

Temperature °C (°F)	0 (32)	5 (41)	10 (50)	15 (59)	20 (68)	25 (77)	30 (86)	35 (95)	40 (104)
Correction Factor	1.3	1.2	1.1	1.05	1.0	0.95	0.9	0.85	0.8

**Humidity :** No correction is required.

**Pressure :** To correct for pressure, use the formula below:

$$\frac{\text{Tube Reading (ppm)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

## MEASUREMENT PROCEDURE :

1. For checking the leakage of the pump, insert a freshly sealed detector tube into the pump. Follow the instructions provided with the pump operation manual.
2. Break the tips off a fresh detector tubes (NO<sub>2</sub> & NO) using the tube tip breaker of the pump.
3. Connect the © marked ends with rubber tubing after breaking the tips off each end.
4. Insert the tube into the pump inlet with arrow G on the tube pointing toward the pump.
5. Make certain the pump handle is all the way in. Align the guide marks on the pump body with the guide marks on the handle.
6. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait 45 seconds and confirm the completion of sampling.
7. For smaller measurements of NO less than 5 ppm, repeat the above sampling procedure one more time until the stain reaches the first calibration mark.
8. Read the concentration level at the interface where the stained reagent meets the unstained reagent.
9. If necessary, multiply the readings by the correction factors of the pump strokes, temperature and atmospheric pressure.

## INTERFERENCES :

### (1) NO<sub>2</sub> Tube

Substance	Concentration	Interference	Interference gas only
Nitrogen Monoxide		No	Red belt at demarcation
Hydrogen Chloride		Unclear demarcation	No discolouration
Ozone, Chlorine Dioxide, Halogens	≥ 1/5	+(20%)	Yellowish orange
Sulphur Dioxide	≥ 50 ppm	Unclear demarcation	No discolouration

### (2) NO Tube

Substance	Interference	Interference gas only
Hydrogen Chloride	No	No discolouration
Ozone, Halogens, Chlorine Dioxide	No	No discolouration
Sulphur Dioxide	No	No discolouration
Nitrogen Dioxide	No	No discolouration

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or our distributors in your territory.

## DANGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (2011) : NO<sub>2</sub> - 3 ppm, NO - 25 ppm

Threshold Limit Value-Short Term Exposure Limit by ACGIH (2011) : NO<sub>2</sub> - 5 ppm

**INSTRUCTIONS ON DISPOSAL :**

The reagent of the NO<sub>2</sub> tube does not use toxic substances. The reagent of the NO tube uses a small amount of hexavalent chromium. When disposing the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

**WARRANTY :**

If you have any questions regarding gas detection and the quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer : Gastec Corporation  
8-8-6 Fukayanaka, Ayase-City, Kanagawa 252-1195, Japan  
<http://www.gastec.co.jp/>  
Telephone +81-467-79-3910 Facsimile +81-467-79-3979

IM0010E3  
Printed in Japan  
11K1Z