

ENERGY AND COMFORT

Ventilation Test Instruments



Model 9565

Features and Benefits

- Best-in-class air velocity accuracy
- Optional “smart” plug-in probes, including VOC, CO₂, and rotating vane probes
- Accommodates up to two K-alloy thermocouples
- Large graphic display
 - Displays up to five measurements simultaneously
 - On-screen messages and instructions
 - Program for local language
- Intuitive menu structure allows for ease of use and setup
- Multiple data logging formats
- Bluetooth communications for transferring data or remote polling
- Includes TRAKPRO™ and LogDat2™ downloading software with USB cable

VELOCICALC® Multi-Function Ventilation Meter Model 9565

The VELOCICALC® Model 9565 series are portable, handheld, Multi-Function Ventilation Test Instruments featuring a menu-driven user interface for easy operation in your local language. On-screen prompts and step-by-step instructions guide the user through instrument setup, operation, and field calibration. The 9565 also features an ergonomic, overmolded case design with probe holder and a keypad lockout to prevent tampering during unattended use. These instruments are available with or without a differential pressure sensor and are designed to work with a wide range of plug-in probes.

Applications

- HVAC testing and balancing
- Clean room testing
- Biological safety cabinet and laboratory fume hood testing
- HVAC commissioning and troubleshooting
- IAQ investigations
- Thermal comfort studies
- Ventilation evaluations
- Process air flow testing



TRUST. SCIENCE. INNOVATION.



VELOCICALC Plug-In Probes

The plug-in probes allow users to make various measurements by simply plugging in a different probe that has the features and functions best suited for a particular application.

Plug-in probes for the VELOCICALC series can be ordered at any time and include a data sheet with certificate of traceability. When it's time for servicing, only the probe needs to be returned since all the calibration data is stored within the probe.

Thermoanemometer Air Velocity Probes

TSI offers four models featuring multiple measurements in a compact, robust probe design. These telescopic probes are available in straight or articulating construction, and with or without a relative humidity sensor. Models with a relative humidity sensor can also calculate wet bulb and dewpoint temperature.

Common applications include duct traversing, face velocity testing of chemical fume hoods, biological safety cabinets and HEPA filters. When combined with the 9565, advanced measurement applications can be performed including heat flow, draft rate and turbulence intensity.

Rotating Vane Anemometer Probes

Rotating vane probes are available in 1.5" (35 mm) and 4" (100 mm) diameters, and measure air velocity and temperature with flow calculation. Measurement applications include face velocity as well as air velocity in turbulent airstreams. An optional telescopic articulating probe is available for both models, and an Aircone kit is available for the 4" vane head model.

Pitot Probes and Airflow Probe 800187

Pitot probes are used to obtain air velocity and air volume measurements within ductwork by performing a duct traverse. Consult factory for sizes and part numbers.

The Airflow Probe Model 800187 is an 18" (46 cm) straight Pitot probe that can be used to perform duct traverses and are ideally suited for measuring in small diameter ductwork.



LogDat2™ Downloading Software


The VELOCICALC Model 9565 Series includes downloading software called LogDat2. LogDat2 software transfers the stored data from the Model 9565 to a computer as a spreadsheet file. This software is useful for applications such as duct traverses, fume hood, and filter face velocity testing.

Reading Type	Standard					
Temperature	70.0deg F					
Pressure	29.92inHg					
Statistics	Channel:	Vel	T	H	Dewpoint	Wetbulb
	Units:	ft/min	deg F	%rh	deg F	deg F
	Average:		827	71.9	22.1	31.3
	Minimum:		806	71.9	22.1	31.3
Date	Time	Vel	T	H	Dewpoint	Wetbulb
MM/dd/yyyy	hh:mm:ss	ft/min	deg F	%rh	deg F	deg F
3/1/2011	8:41:38	828	71.9	22.1	31.3	51.6
3/1/2011	8:41:40	842	71.9	22.1	31.3	51.6
3/1/2011	8:41:42	836	71.9	22.1	31.3	51.6
3/1/2011	8:41:44	809	71.9	22.1	31.3	51.6
3/1/2011	8:41:46	806	71.9	22.1	31.3	51.6
3/1/2011	8:41:48	819	71.9	22.1	31.3	51.7
3/1/2011	8:41:50	838	71.9	22.1	31.3	51.7
3/1/2011	8:41:52	837	71.9	22.2	31.3	51.7

Data Collection and Reporting

Expanded data logging capacity and the inclusion of TRAKPRO Data Analysis Software provides the capabilities to work more effectively and efficiently. The 9565 can store up to 38.9 days of data collected at one-minute log intervals. The stored data can be recalled, reviewed on screen, and downloaded for easy reporting.

- Log multiple parameters to investigate trends.
- Store up to 38.9 days of data collected at one-minute log intervals
- User-selectable logging intervals and start/stop times
- Download data to TRAKPRO data analysis software
- Report generation
- Instrument programming
- Graph creation

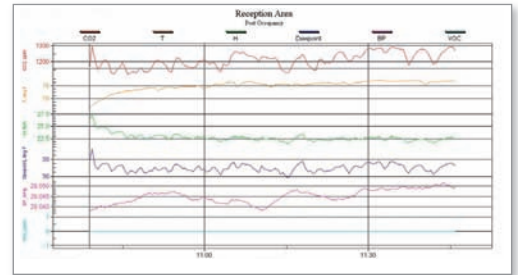

Probe Specifications

Models 960, 962, 964, 966, 496, 995, 980, 982, 792, 794, 984, 985, 986, and 987

960 Thermoanemometer Straight Probe Velocity and Temperature

Range 0 to 9,999 ft/min (0 to 50 m/s) 0 to 200°F (-18 to 93°C)
Accuracy ±3% of reading or ±3 ft/min (±0.015 m/s), whichever is greater^{4&5} ±0.5°F (±0.3°C)⁶
Resolution 1 ft/min (0.01 m/s) 0.1°F (0.1°C)

962 Thermoanemometer Articulating Probe Velocity and Temperature

Range 0 to 9,999 ft/min (0 to 50 m/s) 0 to 200°F (-18 to 93°C)
Accuracy ±3% of reading or ±3 ft/min (±0.015 m/s), whichever is greater^{4&5} ±0.5°F (±0.3°C)⁶
Resolution 1 ft/min (0.01 m/s) 0.1°F (0.1°C)

964 Thermoanemometer Straight Probe Velocity, Temperature and Humidity

Range 0 to 9,999 ft/min (0 to 50 m/s) 14 to 140°F (-10 to 60°C) 5 to 95% RH
Accuracy ±3% of reading or ±3 ft/min (±0.015 m/s), whichever is greater^{4&5} ±0.5°F (±0.3°C)⁶ ±3% RH⁷
Resolution 1 ft/min (0.01 m/s) 0.1°F (0.1°C)

966 Thermoanemometer Articulating Probe Velocity, Temperature and Humidity

Range 0 to 9,999 ft/min (0 to 50 m/s) 14 to 140°F (-10 to 60°C) 5 to 95% RH
Accuracy ±3% of reading or ±3 ft/min (±0.015 m/s), whichever is greater^{4&5} ±0.5°F (±0.3°C)⁶ ±3% RH⁷
Resolution 1 ft/min (0.01 m/s) 0.1°F (0.1°C)

496 Rotating Vane 1.5 in. (35 mm) Velocity and Temperature

Range 100 to 3,000 ft/min (0.50 to 15.00 m/s) 32 to 140°F (0 to 60°C)
Accuracy ±3% of reading ±4 ft/min (±0.02 m/s) ±2.0°F (±1.0°C)
Resolution 1 ft/min (0.01 m/s) 0.1°F (0.1°C)

995 Rotating Vane 4 in. (100 mm) Probe Velocity and Temperature

Range 50 to 6,000 ft/min (0.25 to 30 m/s) 32 to 140°F (0 to 60°C)
Accuracy ±1% of reading ±4 ft/min (±0.02 m/s) ±2.0°F (±1.0°C)
Resolution 1 ft/min (0.01 m/s) 0.1°F (0.1°C)

980 IAQ Probes CO₂, Temperature and Humidity

Range 0 to 5,000 ppm CO₂, 5 to 95% RH, 14 to 140°F (-10 to 60°C)
Accuracy ±3% of reading or ±50 ppm, whichever is greater⁹
 CO₂ ±3% RH⁷ ±1.0°F (±0.6°C)⁶
Resolution 1 ppm CO₂ 0.1% RH 0.1°F (0.1°C)

982 IAQ Probes Model CO, CO₂, Temperature and Humidity

Range 0 to 500 ppm CO 0 to 5000 ppm CO₂
 5 to 95% RH 14 to 140°F (-10 to 60°C)
Accuracy ±3% of reading or ±3 ppm, whichever is greater⁸ CO
 ±3% of reading or ±50 ppm, whichever is greater⁹
 CO₂ ±3% RH⁷ ±1.0°F (±0.6°C)⁶
Resolution 0.1 ppm CO 1 ppm CO₂ 0.1% RH 0.1°F (0.1°C)

792 and 794 Thermocouple Probes Temperature

Range -40 to 1200°F (-40 to 650°C)
Accuracy ±0.1% of reading +2°F (±0.056% of reading +1.1°C)
Resolution 0.1°F (0.1°C)

984 Low Concentration (ppb) VOC and Temperature

Range 10 to 20,000 ppb, -10 to 60°C (14 to 140°F)
Accuracy ±0.5°C (±1.0°F)¹
Resolution Up to 10 ppb, 0.1°C (0.1°F)

985 High Concentration (ppm) VOC and Temperature

Range 1 to 2,000 ppm, -10 to 60°C (14 to 140°F)
Accuracy ±0.5°C (±1.0°F)¹
Resolution Up to 10 ppm, 0.1°C (0.1°F)

986 Low Concentration (ppb) VOC, Temperature, CO₂, and Humidity

Range 10 to 20,000 ppb, 0 to 5,000 ppm CO₂
 -10 to 60°C (14 to 140°F), 5 to 95% RH
Accuracy ±3% of reading or 50 ppm, whichever is greater
 ±0.5°C (±1.0°F)¹, ±3% RH²
Resolution Up to 10 ppb, 0.1 ppm CO₂, 0.1°C (0.1°F), 0.1% RH

987 High Concentration (ppm) VOC, Temperature, CO₂, and Humidity

Range 1 to 2,000 ppm, 0 to 5,000 ppm CO₂
 -10 to 60°C (14 to 140°F), 5 to 95% RH
Accuracy ±3% of reading or 50 ppm, whichever is greater
 ±0.5°C (±1.0°F)¹, ±3% RH²
Resolution Up to 10 ppm, 0.1 ppm CO₂, 0.1°C (0.1°F), 0.1% RH

Specifications

VELOCI-CALC Multi-Function Ventilation Meter Models 9565, 9565-A, 9565-P, 9565-X and Optional Probes

Velocity (Pitot or Airflow probe for Meter Models 9565, 9565-A, 9565-P)

Range ¹	250 to 15,500 ft/min (1.27 to 78.7 m/s)
Accuracy ²	±1.5% at 2,000 ft/min (10.16 m/s)
Resolution	1 ft/min (0.01 m/s)

Duct Size

Dimensions	1 to 500 inches in increments of 0.1 in. (2.5 to 1,270 cm in increments of 0.1 cm)
------------	---

Volumetric Flow Rate

Range	Actual range is a function of velocity, pressure, duct size, and K factor
-------	---

Static/Differential Pressure (Meter Models 9565, 9565-A, 9565-P)

Range ³	-15 to +15 in. H ₂ O (-28.0 to +28.0 mm Hg, -3,735 to +3,735 Pa)
Accuracy	±1% of reading ±0.005 in. H ₂ O (±0.01 mm Hg, ±1 Pa)
Resolution	0.001 in. H ₂ O (0.1 Pa, 0.01 mm Hg)

Barometric Pressure

Range	20.36 to 36.648 in. Hg (517.15 to 930.87 mm Hg)
Accuracy	±2% of reading

Instrument Temperature Range

Operating (Electronics)	40 to 113°F (5 to 45°C)
Storage	-4 to 140°F (-20 to 60°C)

Data Storage Capabilities

Range	26,500+ samples and 100 test IDs
-------	----------------------------------

Logging Interval

1 second to 1 hour

Time Constant

User selectable

External Meter Dimensions

3.8 in. x 8.3 in. x 2.1 in. (9.7 cm x 21.1 cm x 5.3 cm)

Meter Weight with Batteries

0.8 lbs. (0.36 kg)

Power Requirements

Four AA-size batteries or AC adapter



To Order

Multi-Function Ventilation Meter with differential pressure sensor and Thermoanemometer Probe

Specify	Description
9565	Multi-function ventilation meter 9565-P with straight air velocity probe Model 964
9565-A	Multi-function ventilation meter 9565-P with articulated air velocity probe Model 966

Multi-function Ventilation Meter Only. Choose a probe most appropriate for your measurement needs.

Specify	Description
9565-X	Multi-function ventilation meter, no plug-in probes, no differential pressure sensor
9565-P	Multi-function ventilation meter, no plug-in probes, with differential pressure sensor, tubing and static pressure probe

NOTE: All models include: Instrument, hard carrying case, 4 alkaline batteries, USB cable, universal power supply, instruction manual, calibration certificate, LogDat2 and TRAKPro downloading software.

Models 9565, 9565-A, and 9565-P also include (1) 8-ft. (2.4-m) rubber tube and (1) static pressure tip.

¹ Pressure velocity measurements are not recommended below 5 m/s (1,000 ft/min) and are best suited to velocities over 10.00 m/s (2,000 ft/min). Range can vary depending on barometric pressure.

² Accuracy is a function of converting pressure to velocity. Conversion accuracy improves when actual pressure values increase.

³ Overpressure range = 360 mmHg, 48 kPa (190 in. H₂O).

⁴ Temperature compensated over an air temperature range of 5 to 65°C (40 to 150°F).

⁵ The accuracy statement begins at 0.15 m/s through 50 m/s (30 ft/min through 9,999 ft/min).

⁶ Accuracy with instrument case at 25°C (77°F), add uncertainty of 0.03°C/°C (0.05°F/°F) for change in instrument temperature.

⁷ Accuracy with probe at 25°C (77°F). Add uncertainty of 0.2% RH/°C (0.1% RH/°F) for change in probe temperature. Includes 1% hysteresis.

⁸ At 25°C (77°F). Add uncertainty of 0.36%/°C (±0.2%/°F) for change in temperature.

⁹ At calibration temperature. Add uncertainty of 0.5%/°C (±0.28%/°F) for change in temperature.

TSI Incorporated - 500 Cardigan Road, Shoreview, MN 55126-3996 USA

USA	Tel: +1 800 874 2811	E-mail: info@tsi.com	Website: www.tsi.com
UK	Tel: +44 149 4 459200	E-mail: tsiuk@tsi.com	Website: www.tsiinc.co.uk
France	Tel: +33 491 11 87 64	E-mail: tsifrance@tsi.com	Website: www.tsiinc.fr
Germany	Tel: +49 241 523030	E-mail: tsigmbh@tsi.com	Website: www.tsiinc.de
India	Tel: +91 80 41132470	E-mail: tsi-india@tsi.com	
China	Tel: +86 10 8251 6588	E-mail: tsi-beijing@tsi.com	
Singapore	Tel: +65 6595 6388	E-mail: tsi-singapore@tsi.com	



TRUST. SCIENCE. INNOVATION.

Contact your local TSI Distributor or visit our website www.tsi.com for more detailed specifications.