


Hybrivet Systems, Inc.

17 Erie Drive Natick, MA 01760 (508)651-7881 Fax: (508)651-8837 www.LeadCheck.com

LeadCheck® Swabs Performance Curve

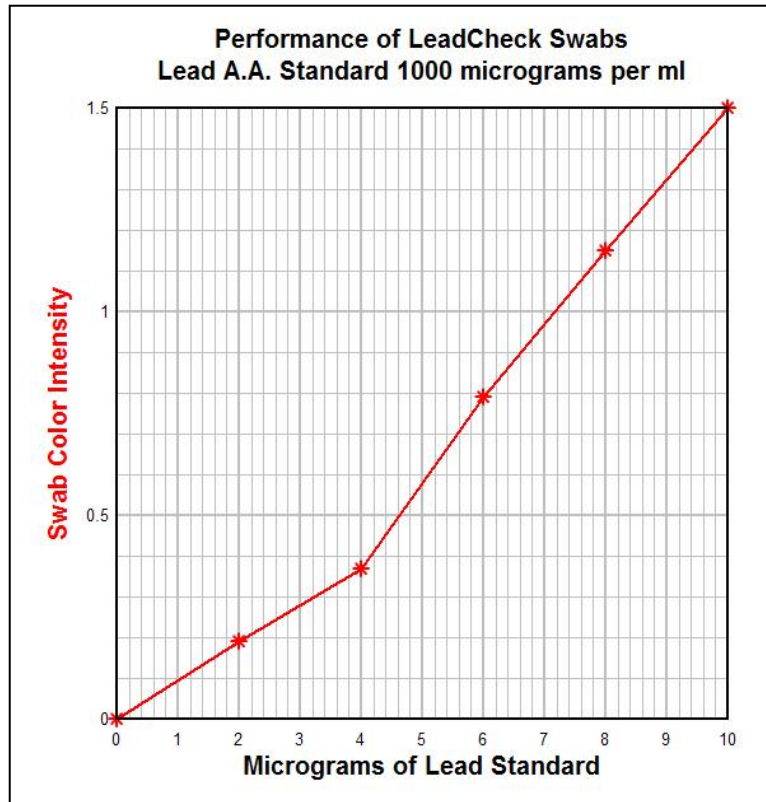

Legend

Standard curves were developed using several lots of the LeadCheck® Swabs. An A.A. standard solution of 1000 micrograms/ml lead was diluted to produce the concentrations used in each series of experiments. The results of several curves were averaged and have been summarized in the above graph. The intensity of red/pink color developed at each of the concentrations was scored with pluses where 1.5 plus is considered the most intense color.