


ZEFON HEAVY DUTY 10MM DORR-OLIVER CYCLONE FOR 37MM IH CASSETTES CATALOG NO. 10044015

The Zefon heavy duty Dorr-Oliver Cyclone is designed to separate respirable dust particles so they can be collected onto a filter and analyzed. Larger particles fall into a grit pot and are discarded.

Proper Cyclone Assembly

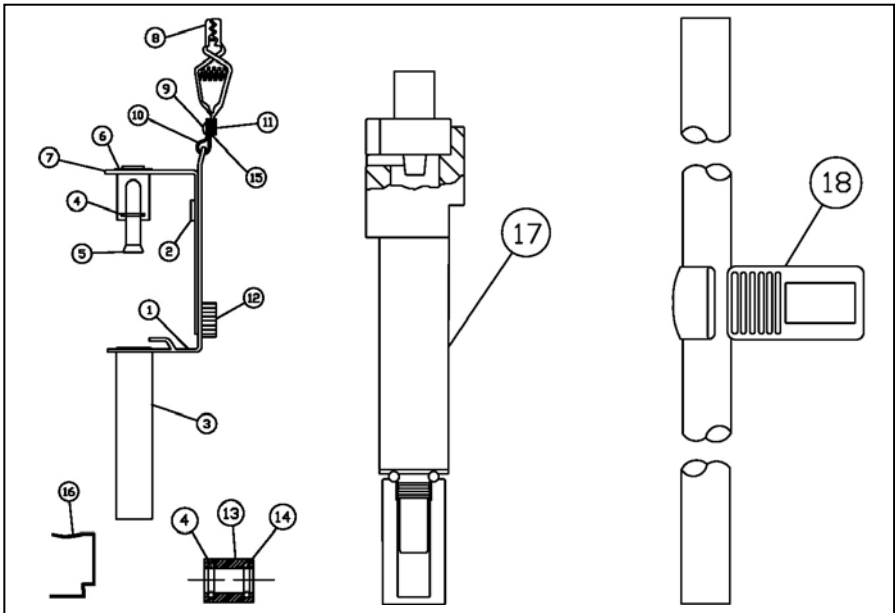


Complete Cyclone for IH Cassettes 10044015

Item	Description	Product #
1	Bracket, Lower	456239
2	Guide, Standoff	456230
3	Guard, Cyclone	456233
4	O-Ring(2 required)	635037
5	Connector Assembly	456227
6	Retaining Ring	625420
7	Bracket, Upper	456229
8	Clip, Crocodile	456222
9	Rivet	625418

Item	Description	Product #
10	Clip, Cable	63665
11	Washer	625423
12	Nut, Locking	465261
13	Coupler	457169
14	O-Ring	62482
15	Spacer	456238
16	Clamp	461936
17	Cyclone Assembly	456228
18	Sampling Line Assembly	456226

Cyclone Assembly - 456228

<i>Item</i>	<i>Description</i>	<i>Product #</i>
1	<i>Cyclone, Modified, with Vortex Finder</i>	456235
2	<i>Grit Pot</i>	456234
3	<i>O-Ring</i>	59676
4	<i>Replacement Vortex Finder</i>	39468

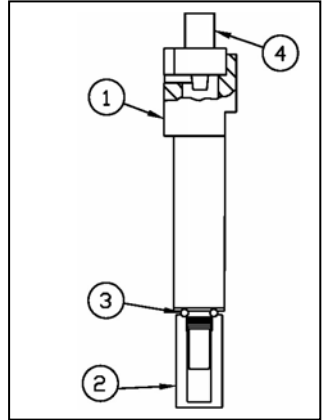

5350 SW 1st Lane, Ocala, FL 34474 USA
Tel: (352) 854-8080 Fax: (352) 854-7480
E-mail: ZefonCS@zefon.com
www.zefon.com