

## 1. PERFORMANCE


- 1) Measuring range : 20-1,000 ppm
- Number of pump strokes : 1 (100mℓ)
- 2) Sampling time : 1.5 minutes/1 pump stroke
- 3) Detectable limit : 10 ppm
- 4) Shelf life : 2 years
- 5) Operating temperature : 10 ~ 40 °C
- 6) Temperature compensation : Necessary (See "TEMPERATURE CORRECTION TABLE")
- 7) Reading : Direct reading from the scale calibrated by 1 pump stroke
- 8) Colour change : Yellow → Brown

## 2. RELATIVE STANDARD DEVIATION

RSD-low : 10 %    RSD-mid. : 10 %    RSD-high : 5 %

## 3. CHEMICAL REACTION

Chromium oxide is reduced.



## 4. CALIBRATION OF THE TUBE

GAS CHROMATOGRAPHY

## 5. INTERFERENCE AND CROSS SENSITIVITY

Substance	Interference	Coexistence
Alcohols	Similar stain is produced.	Higher reading are given.
Esters	∕	∕
Ketones	∕	∕
Aromatic hydrocarbons	∕	∕
Paraffin hydrocarbons	Whole reagent is discoloured to Pale brown.	It the top of brown stain is clear, the accuracy of readings is not affected.
Halogenated hydrocarbons	∕	∕

FIG.1

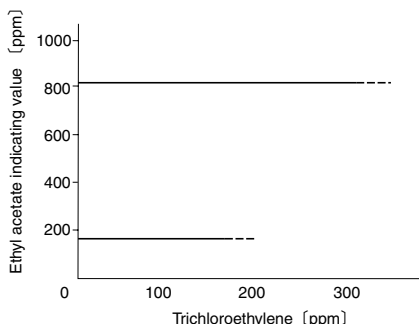


FIG.1 Influence of Trichloroethylene

TEMPERATURE CORRECTION TABLE

Scale Readings (ppm)	True Concentration (ppm)						
	10 °C (50 °F)	15 °C (59 °F)	20 °C (68 °F)	25 °C (77 °F)	30 °C (86 °F)	35 °C (95 °F)	40 °C (104 °F)
1,000	1,330	1,200	1,000	830	700	600	500
800	1,080	950	800	670	550	470	400
600	830	720	600	500	420	360	300
400	570	480	400	330	280	240	200
200	280	240	200	170	140	120	100
100	150	120	100	80	70	60	50
50	70	60	50	40	30	20	10
20	30	25	20	15	10	7	4