

2019-2020 PRODUCT CATALOG



International Edition



Zefon

INTERNATIONAL

The Professionals Choice for Air Sampling Equipment

GAS DETECTION EQUIPMENT



Passive Sampling Badges: 81





3M Passive Air Monitoring Badges

3M™ Air Monitors are simple and effective devices that collect contaminants through the scientific principle of diffusion. They meet or exceed OSHA accuracy requirements of $\pm 25\%$ at 95% confidence level for many work contaminants.




Features:

- No batteries, hoses, pumps or equipment to calibrate.
- Can be analyzed in your lab or returned for analysis.
- 3M's manufacturing operation is ISO 9002 certified.
- Can also be used for area monitoring if sufficient air flow exists.
- Easy to use. Just clip the monitor to lapel, collar, or pocket.
- 3M provides reference information needed to use the monitors.
- 3M monitors are small, lightweight and will not interfere with employee activities.

ORGANIC VAPOR MONITOR 3500	ETHYLENE OXIDE MONITOR 3550	FORMALDEHYDE MONITOR 3720	ORGANIC VAPOR MONITOR 3520 WITH BACK-UP SECTION
			
Single charcoal sorbent wafer for easy collection of organic vapors. Analysis by gas chromatography.	Designed for sampling personnel or work areas in the health care pharmaceutical, and chemical industries. Analysis procedure is available on request.	Monitors personnel or work areas in health care, laboratories, and in the chemical, pulp/paper, foundry and textile industries. Analysis procedure is available on request. Not acceptable for STEL monitoring.	Primary and back-up sorbent pads for sampling demanding environments. Especially suited for monitoring compounds like acrylonitrile, butadiene and methylene chloride for which activated carbon shows limited capacity.

MONITOR TYPE	CONFIGURATION	PRODUCT	PACK SIZE
Organic Vapor	Monitor Only	3M-3500	10/cs
	Monitor Only	3M-3500B	50/cs
	Monitor + Prepaid Lab Analysis	3M-3510	5/cs
Organic Vapor with Back-Up Section	Monitor Only	3M-3520	5/cs
	Monitor Only	3M-3520B	50/cs
	Monitor + Prepaid Lab Analysis	3M-3530	5/cs
Ethylene Oxide	Monitor Only	3M-3551	5/cs
	Monitor + Prepaid Lab Analysis	3M-3550	5/cs
Formaldehyde	Monitor Only	3M-3721	5/cs
	Monitor Only	3M-3721B	25/cs
	Monitor + Prepaid Lab Analysis	3M-3720	5/cs

Note: Limited shelf life

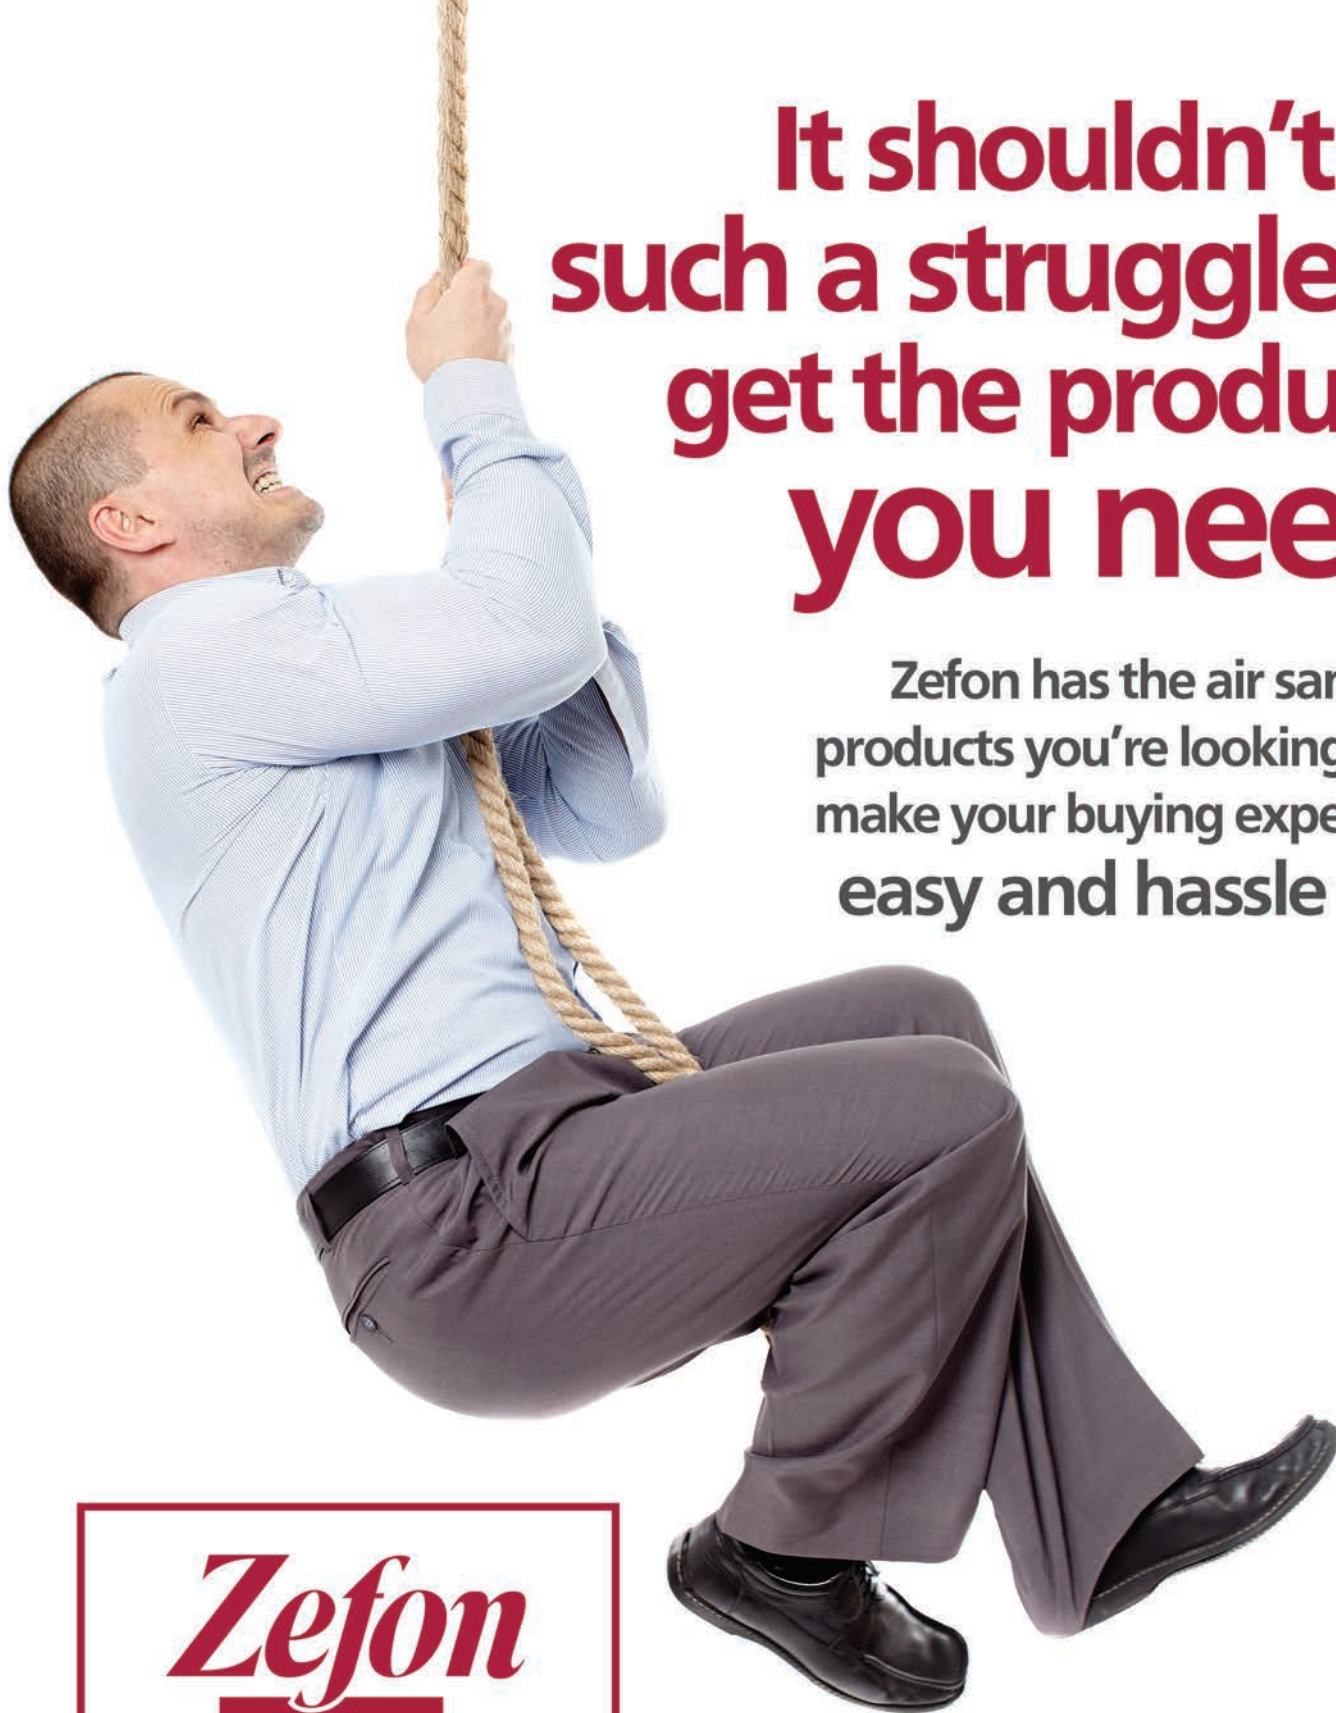

**It shouldn't be
such a struggle to
get the products
you need.**

Zefon has the air sampling
products you're looking for to
make your buying experience
easy and hassle free.

Zefon

INTERNATIONAL


The Professionals Choice for Air Sampling Equipment

Contact your local representative for more information | Follow us on



Zefon

INTERNATIONAL

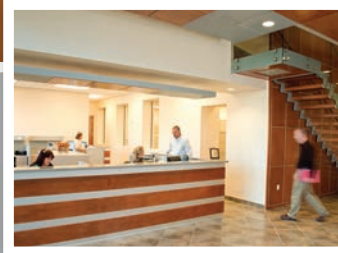

Follow us to stay up-to-date on new products, specials, and company news!



www.zefon.com



Zefon

INTERNATIONAL

The Professionals Choice for Air Sampling Equipment